




# Temp. & Humidity Sensor

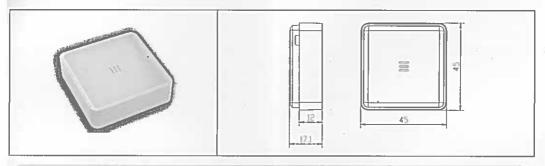

Item Nr.:

Item Description:


S903TH-ZG

Zigbee Temperature and Humidity Sensor

## **NOTICE**

### RISK OF DAMAGE TO DEVICE

Always operate the product in complaince with the specified technical data. Fallure to follow these instructions will result in equitment damage

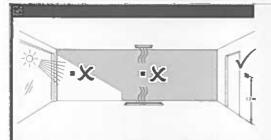



This sensor combine two sensors in one unit. The sensor measures temperature and humidity in the environment where the sensor is installed.

## DATASHEET

Description
Protocal
Wireless Range
Power Source

Max. Working Current Standby Current Temp. Accuracy

Temp. Accuracy Humidity Accuracy

Operating Temp.
Operating Humidity
Dimension

Humidity & Temperature Sensor Zigbee 3.0

100m Outdoor, 30m Indoor CR2450

10.8mA <1uA

± 1.5°C ± 5% -10°C - 40°C

Up to 85% non-condensing

45\*45\*17.1mm

## SETTING



#### 1. FACTORY RESET

Long press Button B for 10s, A will blink quickly in red, then release B and A will stay solid for 3s and reset.

### 2. ADD TO THE ZIGBEE NETWORK

Push B for 3 times.

- if the device is not in the network, A will blink slowly in orange, then it will start searching network and adding.
- if the device is in the network, A will blink slowly in green for 5s. Then please do factory reset and pair.

#### 3. INDICATOR MEANING

A. Power on: A blink in green slowly for 7 times. B Add to the network

- a. Searching the network: A blink slowly in orange, timeout 2mins.
- b. Add to the network: A stay in solid green
- c. Added successful: A turns off.
- d. Add network failed: A stay solid orange for 3s then off.
- C. When the battery power is empty soon, A will blink orange once per minute,
- D. When the device is lost connection with the hub, A will blink quickly in orange for 3s.